


MIP - 3100 DOUBLE NOTCH STEEL SEALER

TTR TRADITIONAL
TOOL REPAIR, INC.
WWW.TRADITIONALTOOL.COM
1-877-862-6699

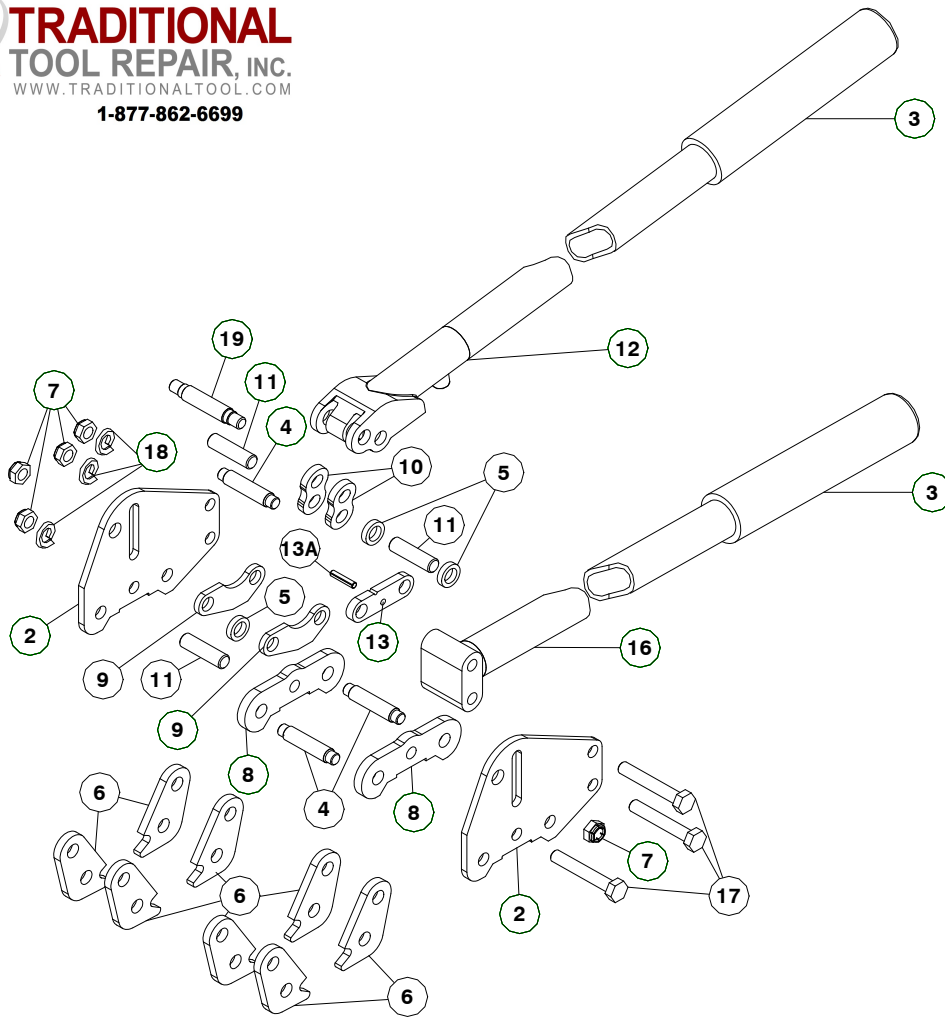

KEY#	DESCRIPTION	QTY	PART#	KEY#	DESCRIPTION	QTY	PART#
2	Side Plate	2	M3100-2	10	Short Link	2	M3100-10
3	Handle Grip	2	M3100-3	11	Link Pin	3	M3100-11
4	Jaw Pin	3	M3100-4	12	Upper Handle Assembly	1	M3100-12
5	Spacer	3	M3100-5	13	Toggle Link Male	1	M3100-13
6	Jaw	8	M3100-6	13A	Roll Pin	1	M3100-13A
7	Hex Nut	5	M3100-7	16	Lower Handle Assembly	1	M3100-16
8	Notcher	2	M3100-8	17	Hex Head Screw	3	M3100-17
9	Toggle Link Female	2	M3100-9	**18	Lock Washer	3	M3100-18
				19	Upper Handle Threaded Pin	1	M3100-19

Reference part number when ordering.

This sealer is available in 3/4", 1", and 1-1/4" sizes.

Reference part number and size when ordering.

*** Parts 13 & 13A are sold together.**

**** Part required on MIP 3100-114 only**

• Key wear part

Read all operating & safety instructions.


Prices subject to change without notice.

Shipments are FOB our plant.

MIP-3100 OPERATING INSTRUCTIONS

OPERATING INSTRUCTIONS:

1. Hold the MIP-3100 horizontally and place the jaws of the tool across the middle of the seal. This step is very important as a seal crimped off-center may cause the strap to become loose and snap apart, possibly resulting in serious injury or death.
2. Press the handles of the sealer together while keeping the sealer in a horizontal position. The seal will be completely sealed when the handles are horizontal and can be squeezed no further.
3. Remove the sealer and inspect the seal to verify the seal is properly holding the strap. The seal should have a total of four indentations (notches), two on each side. The notches should be centered on the seal. The seal should lay flush against the strapping with both ends of the strapping passing completely through the seal. If seal is not properly formed, remove it and begin again. Attempting to reseal will not ensure a proper seal and will decrease the break strength.
4. Never use the sealer to break the strap. Breaking the strap without the proper cutters may cause the strap to snap back toward the operator, possibly resulting in serious injury or death. This action will also cause damage to the sealer, which will require the sealer to be repaired or replaced at owner's expense.

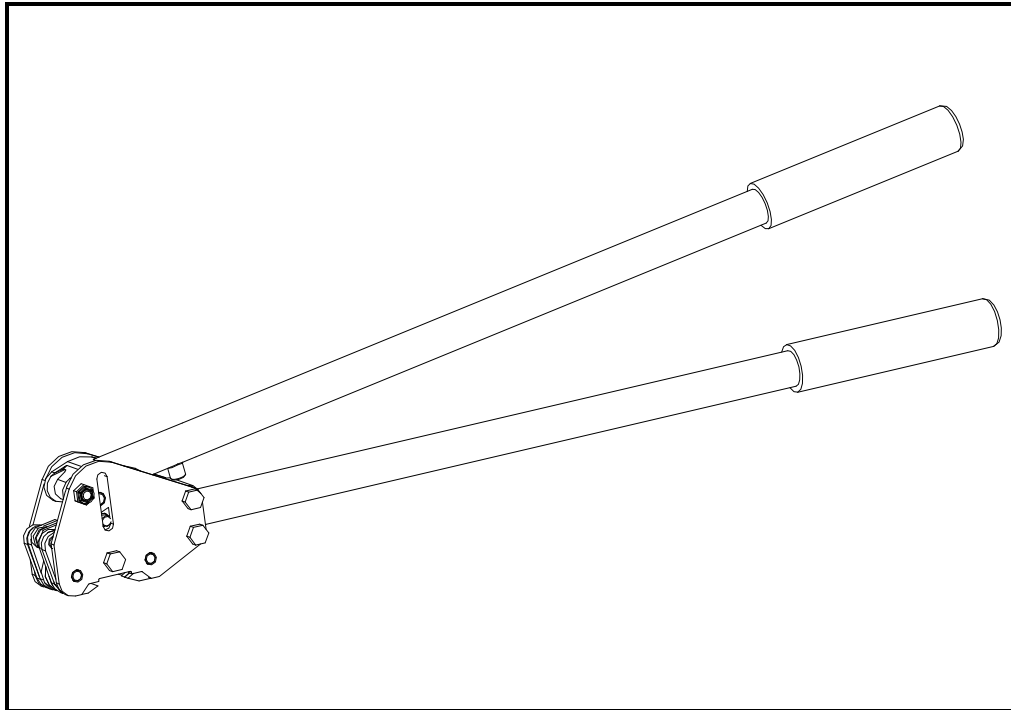

SAFETY WARNINGS:

- Before operating the tool, review the enclosed MIP, Inc. General Hand Tools and Strapping Safety booklet. Only trained personnel should operate MIP, Inc. hand tools.
- Keep fingers away from areas that can pinch or cut. These areas are primarily located at the front of the tool.
- Only use equipment recommended for the strap. The MIP-3100 is recommended only for .025-.044 gauge steel, and each tool is specific to strap width. The MIP-3100 is available in 3/4", 1", or 1-1/4" sizes
- Review the instructions and safety material on a regular basis.
- **Warning:** Improper use may result in blindness, severe laceration, amputation, or death.

Sales and Service 877-862-6699